

TF-TRB-03, TF-TRS-03, TF-TRW-03

ELECTRIC HANGER FOR TOWELS





Installation and user manual



Note: Please read the instructions before starting the installation!

Before commencing any installation work, carefully read the installation and operating instructions and keep them for future reference.



Adherence to the guidelines contained in the user manual and compliance with the rules contained therein will ensure safe operation of the device.

SYMBOLS DESCRIPTION



The product complies with European directives



The symbol of the crossed-out wheeled bin means that the device should be disposed of separately from household waste. The product should be recycled in accordance with local environmental regulations for waste disposal. By separating the marked product from municipal waste, you help reduce the amount of waste sent to incineration or landfills and minimize the potential negative impact on human health and the environment.



Never attempt to disassemble or modify the product in a manner other than described in this manual.



NOTE: Keep this manual for future reference. If you are selling or transferring this product, make sure this manual is included with the product.

Safety information

- Do not leave the device unsupervised when used near children, people requiring special attention or pets.
- Keep the product packaging out of the reach of children.
- Do not connect the device until you have made sure that the voltage on the rating plate is the same as your household voltage.
- Make sure the base of the plug is properly grounded.
- Do not place the device near showers, bathtubs, swimming pools, etc.
- Do not place the device near showers, bathtubs, swimming pools and other open water tanks.
- Do not allow children to play with the device. Keep the device out of the reach of children.
- Device intended for use in portrait orientation.
- The external parts of the device become hot during use; avoid touching them until the device has cooled down
- Do not place the device under a socket.
- Do not place the device near flammable objects or products.
- When using for the first time, leave the heater on for 2 or 3 hours at maximum temperature in a ventilated place to dissipate the initial ,new' smell.
- When installing the device, keep a safe distance of 100 cm in front and 60 cm on each side of the radiator.
- During operation, the device may generate audible noises caused by the heating or cooling of the oil. This is completely normal and does not affect the operation of the device.
- Do not use the heater directly on the floor without placing it on a stable base or feet.
- If the power cord is damaged, it must be replaced by a qualified service technician.

WARNING: This appliance is only designed to dry textiles that have been washed in water. WARNING: To avoid danger to very young children, this appliance must be installed so that the lower edge of the appliance is at least 60 cm above the floor of the room.

• This appliance can be used by children from 8 years of age and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the device. Cleaning and user maintenance must not be performed by children without supervision. Keep children under 3 years of age away from the device. Children under the age of 8 must not plug in, adjust and clean the appliance or carry out maintenance on the heater.




CAUTION: Some parts of this product can become very hot and cause burns. Particular attention should be paid to places with children and vulnerable people. Presented towel rails are used only for heating dry towels.

Device installation:


Before installation, make sure the following requirements are met: See Fig. 1

- 1. The control panel must be in the down position during installation.
- 2. The distance between the bathtub and the device should be at least 60 cm.
- 3. The distance between the ceiling and the device should be at least 25 cm.
- 4. The distance from the ground to the device should be at least 40 cm.

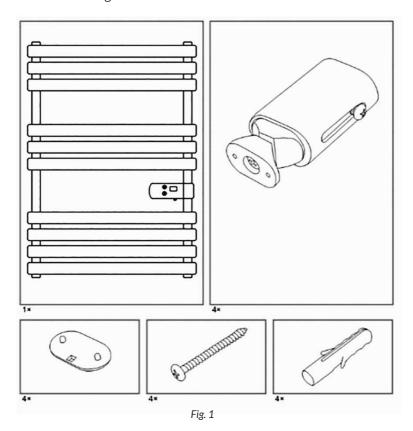

How to install the device:

- 1. Please drill 4 Ø8 holes according to the dimensions shown in Fig. 2.
- 2. Insert the 4 expansion tubes into the holes, then fix the 4 "external brackets" to the wall with ST4x40 screws. Please see Fig.3.
- 3. Fix 4 of the "Inner Fixings" and 4 of the "Front Fixings" on the unit with 4 ST4.0x20 screws. See Fig. 4
- 4. Fasten the device's "internal fasteners" to the "external fasteners" of the wall, adjust the appropriate distance between the device and the wall, and then fasten them with M5x12 screws.

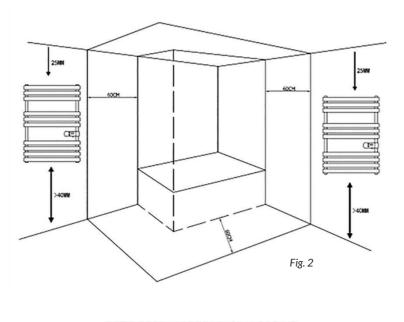

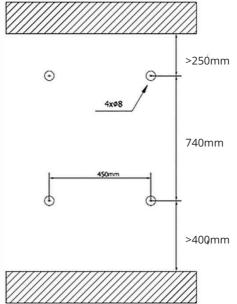


Fig. 3

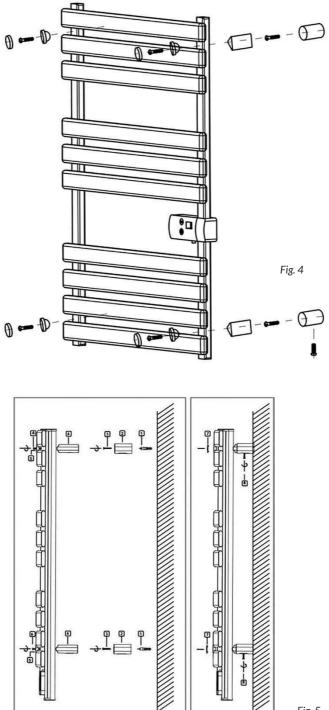


Fig. 5

LED display

1. Continuous heating mode function:

When you press the power button, the device will work in "Continuous heating" mode, and the device will always heat up until you turn it off.

2. Towel heating mode:

Press the power button, then press the "2H" button, the machine will enter the "Towel warming" mode, and the machine will stop after 2 hours. The LED screen always shows the room temperature.



Fig. 6

Product specification:

Model: TF-TR-03

Voltage: AC220-240V, 50/60Hz,

Class: I Power: 450W

Waterproof and dustproof grade: IP24



The symbol of the crossed-out wheeled bin means that the device should be disposed of separately from household waste. The product should be recycled in accordance with local environmental regulations for waste disposal. By separating the marked product from municipal waste, you help reduce the amount of waste sent to incineration or landfills and minimize the potential negative impact on human health and the environment.



WARRANTY CARD

PLACE OF INSTALLATION

	FITTER'S DETAILS
•	Name of company
•	Forename and surname
	Address (street, no.)
	Postal code Locality
•	NIP Tel.
	Date
	Fitter's signature Fitter's stamp
	www.termofol.com
	biuro@termofol.pl
	+48 (12) 376 86 00 Place for the nameplate